

WARNING - TABLE SAW

Any piece of equipment can be dangerous if not operated properly. **YOU** are responsible for the safe operation of this equipment. The operator must carefully read and follow any warnings, safety signs and instructions provided with or located on the equipment. Do not remove, defeat, deface, or render inoperable any of the safety devices or warnings on this equipment. **IF** any safety devices or warnings have been removed, defeated, defaced, or rendered inoperable,

DO NOT USE THIS EQUIPMENT!!!

- WARNING! This product contains or produces one or more chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.
- Do not tape down or otherwise by-pass any safety devices! Always operate this equipment from the designated operator's position.
- Never operate power equipment of any kind if you are tired or if you are under the influence of alcohol, drugs, medication or any substance that could affect your ability or judgment. Be alert! If you get tired while operating this equipment, take a break. Tiredness may result in loss of control.
- Use extreme caution: The blade is very sharp! Keep your hands, feet and all other body parts clear of the blade at all times.
- This 120-volt equipment may require a grounded outlet, do not modify plug.
- Always wear eye, dust, and hearing protection.
- Warning blade gets very hot during use. Use care when changing blades.
- Don't Abuse Cord - Never carry tool by cord, or yank it to disconnect from receptacle.

SAFETY RULES:

- Know Your Power Tool - Learn its applications and limitations as well as the specific potential hazards peculiar to this tool.
- Keep Guards In Place and in working order.
- Remove Wrenches - Form habit of checking to see that wrenches are removed from tool before turning it on.
- Keep Work Area Clean - Cluttered areas and benches invite accidents.
- Avoid Dangerous Environment - *Don't use power tools in damp or wet locations.* Keep work area well lit. Do not expose to rain.
- Keep Children Away - All bystanders should be kept a safe distance from the work area.
- Store Idle Tools - When not in use, tools should be stored in dry, high, or locked-up place, out of reach of children.
- Don't Force Tool - It will do the job better and safer at the rate for which it was designed.
- Use Right Tool - Don't force small tool or attachment to do the job of a larger heavy-duty tool.
- Wear Proper Apparel - No loose clothing or jewelry to get caught in moving parts. Non-slip footwear is recommended. Wear protective hair covering to contain long hair.
- **Always Use Safety Glasses** - Also face or dust mask.
- Don't Abuse Cord - Never carry tool by cord, or yank it to disconnect from receptacle.
- Secure Work - Use clamps or a vise to hold work. It's safer than using your hand, and it frees both hands to operate tool.
- Don't Overreach - Keep proper footing and balance at all times.
- Maintain Tools With Care - Keep clean for best and safest performance.
- **Disconnect Tools - When changing blades**, when not in use; before servicing.
- Avoid Accidental Starting - Be **sure switch is off** when plugging in.
- Outdoor Use Extension Cords - When tool is used outdoors, use only extension cords suitable for outdoors and so marked. Fifty feet maximum of 12-gauge cord. Be sure saw is grounded or double insulated.
- Never Stand On Tool - Serious injury could occur if the tool is tipped or if the blade is accidentally contacted.
- Check Damaged Parts - Before further use of the tool, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, breakage of parts, mounting, and any other conditions that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced.
- **Never leave Tool Running Unattended** - Turn Power Off. Don't leave tool until it comes to a complete stop.

VOLTAGE WARNING: Before connecting the tool to a power source be sure the voltage supplied is the same as that specified on the nameplate of the tool. A power source with voltage greater than that specified for the tool can result in **SERIOUS INJURY** to the user, as well as damage to the tool. If in doubt, **DO NOT PLUG IN THE TOOL**. Using a Power Source with voltage less than the nameplate rating is harmful to the motor.

BLADE GUARD: When cutting operations are performed, the blade guard rises. The cover returns to its original position when the cut is completed. **NEVER DEFEAT OR REMOVE THE BLADE GUARD.** In the interest of your personal safety, always maintain the blade guard in a freely moving condition. Any irregular operation of the blade guard should be corrected immediately. **NEVER USE THE TOOL WITH A FAULTY BLADE GUARD.** If the see-through blade guard becomes dirty, or sawdust adheres to it in such a way that the blade and/or workpiece are no longer easily visible, unplug the saw and clean the blade guard carefully with a damp cloth. Do not use solvents or any petroleum-based cleaners on the plastic cover.

WARNING:

1. **Wear eye protection.**
2. *Keep hands out of path of saw blade.*
3. **Do not operate saw without guards in place.**
4. Do not perform any operation freehand, use the miter head or a push stick when ripping.
5. *Never reach around saw blade.*
6. Shut off power and **wait for saw blade to stop** before servicing or adjusting tool.

ADDITIONAL SAFETY RULES:

1. *Don't use the tool in the presence of flammable liquids or gases.*

2. Check the blade carefully for cracks or damage before operation. Replace cracked or damaged blade immediately.

3. Use only flanges specified for this tool.

4. Be careful not to damage the arbor, flanges (especially the installing surface) or bolt. Damage to these parts could result in blade breakage.

5. Avoid KICKBACKS by keeping the blade sharp, by keeping the rip fence parallel to the blade by keeping the spreader, antikickback fingers and blade guard in place, by not releasing the workpiece until you have pushed it all the way through the blade, and by not ripping a workpiece that is twisted or warped.

6. For your safety, remove the chips, small pieces, etc. from the table top before operation.

7. Avoid cutting nails. Inspect for and remove all nails from the workpiece before operation.

8. Make sure the shaft lock is released before the switch is turned on.

9. Never adjust the blade when the saw is running. Always turn the saw off and wait till the blade comes to a complete stop.

10. Never adjust the blade any higher than necessary to perform task.

11. *Keep hands away from rotating parts.*

12. Make sure the blade is not contacting the workpiece before the switch is turned on.

13. Before using the tool on an actual workpiece, let it run for a while. Watch for vibration or wobbling that could indicate poor installation, or a poorly balanced blade and make corrections before operating.

14. Wait until the blade attains full speed before cutting.

15. Stop operation immediately if you notice anything abnormal.

16. Always use a wood or commercial plastic push stick or the miter head to perform cuts. **KEEP YOU'RE HANDS AWAY.**

17. Never use a metal push stick.

18. Always switch off and **wait for the blade to come to a complete stop** before removing, securing workpiece, changing workpiece position, angle or the blade itself.

19. Don't abuse cord. Never yank cord to disconnect it from the receptacle. Keep cord away from heat, oil, water and sharp edges.

Operation: When cross cutting with this tool, the thickness of the blade is cut as well. Therefore, your cutting line should be on either the left or right side of the groove in the throat plate or miter head. Switch the tool on and wait until the blade attains full speed before gently starting the cut. When the blade contacts the workpiece, gradually bear down on the miter head to perform the cut. When the cut is completed, switch off the tool and wait until the blade has come to a complete stop before removing your wood. When rip cutting make sure to stand to the left of the blade to avoid being struck by kickback. A thin-cut piece could be launched towards the operator. Also objects contacting the coasting blade can be thrown dangerously.

IF the person receiving this handout will not be the user of the equipment, forward these instructions to the operator. If there is any doubt as to the operation or safety of the equipment,

DO NOT USE!! CALL A TOOL SHED IMMEDIATELY!!!
FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN INJURY OR DEATH